


## 83—150 Removal and installation of ring nozzles right or left on instrument panel

---

### Removal

---

- 1 Remove respective cover under instrument panel (68—150).
- 2 Pull connecting hose from ring nozzle.
- 3 Turn ring nozzle lower half slightly while holding ring nozzle upper half in position.
- 4 Pull ring nozzle upper half out of instrument panel.

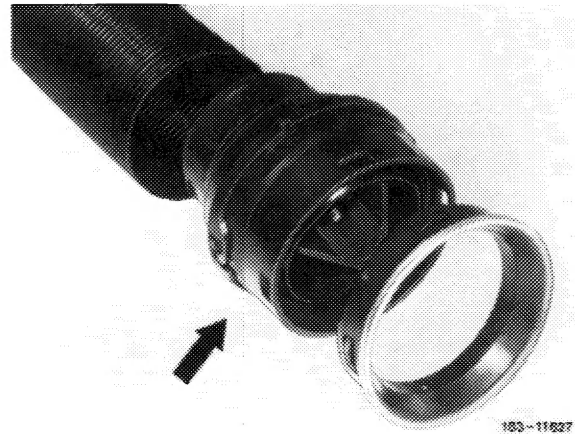

### Installation

---

- 5 Insert ring nozzle upper half into instrument panel.
- 6 Push ring nozzle lower half from rear of instrument panel against upper half, making sure that all the four links will engage in recess provided.
- 7 Attach connecting hose.
- 8 Mount cover.

